

Pairing to Wireless Device

Make sure the wireless **PAIRING** function (Bluetooth®) is available on your electronic device. Specific pairing procedures may vary slightly depending on the device. For detailed information, please refer to your electronic device's User Guide.

After successful pairing, devices will remember each other. Therefore, no pairing will be needed in the future.

1. Keep the distance between the device and the microphone within 3 feet (for pairing only)
2. Turn the microphone on using power button.
3. Activate the wireless pairing function on your device to search for devices to pair and connect with. **Look for "HOUSEPARTY" in device list displayed and select.**
4. **Only** for some electronic devices, Enter password 0000.
5. Microphone is ready to use.

****If you are still unable to connect your device to your Karaoke mic, please RESTART both your device you are using AND the Karaoke mic.**

**** PLEASE NOTE:** This karaoke mic has a built-in speaker and cannot connect to ANY other speaker.**

Voice Changer: Quick Press to Toggle through the four (4) different voices.

Accompaniment Mode: Quick Press to activate. Attempts to remove main vocals from any song. **Results will vary!** Quick press again to Deactivate.

Remix Volume: Slide up to add echo effect. Slide down to reduce echo.

Charging the Karaoke Mic: Use included accessory USB cable to charge for TWO hours to receive a full charge.



House Party
Karaoke

WIRELESS MICROPHONE WITH HI-D SPEAKER

This Karaoke Microphone is compatible with any wireless pairing enabled device, including all iOS and Android smartphones and tablets. It provides hours of playback time from just one two (2) hour charge. It's perfect for streaming all of your favorite music, and pairing with all of your favorite karaoke apps. The microphone also serves as a versatile 2-in-1 wireless microphone for multi-use megaphone projection and loudspeaker effects.

Tip: Log on to YouTube.com, type in "your favorite song + karaoke" to enjoy your favorite song to sing along with!

Before returning this product due to technical issues, please e-mail us first.
EMAIL: customerservice@topdogdirect.com

Volume Up/Skip Fwd: Quick Press to skip forward. Hold button down to increase music volume.

Play/Pause: Quick Press to pause. Quick press to play again.

Volume Down/Skip Back: Quick Press to skip back. Hold button down to decrease music volume.

Power: Press and hold for 3 seconds to Power ON. Repeat to Power Off.

Mic Volume: Slide up/down to increase/decrease your voice microphone volume.



Quick Tip!

Make Sure Speaker is faced AWAY from you to prevent Feedback



WARNING: Lithium-ion Batteries and/or products that contain Lithium-ion Batteries can expose you to chemicals including cobalt, lithium nickel oxide, and nickel, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov

Trademark of Top Dog Direct, LLC. ALL RIGHTS RESERVED.
Distributed by Top Dog Direct, LLC
402 Middletown Blvd Suite 216
Langhorne, PA 19047
Visit www.HousePartyNow.com



TOP DOG
DIRECT